


QUICK GUIDE

ON/OFF

The unit is automatically turned ON when placed in the charging cradle.

In case the unit is switched off, it can be turned on by pushing the 'button' on the MoVi for a few seconds.

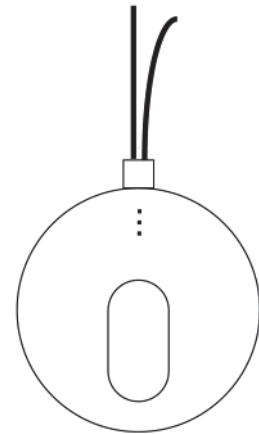

ANSWERING AN INCOMING DOOR CALL

When a call from the door is received, the MoVi will make a Ding-Dong door bell sound. To answer the door call press the button once and speak to the caller. To open the door press the button briefly. The call will automatically hangup after the door has been opened.

If you wish to end the call without letting the caller in, press and hold the button for two seconds.


ANSWERING AN INCOMING TELEPHONE CALL

When a telephone call is received the MoVi will make a ringing sound. To answer the telephone call press the button once and speak to the caller. To end the call press the button a second time.

LED INDICATIONS

The unit has 3 LED indicators as shown on the illustration (1, 2 and 3).

1. Red LED indicates 'low battery'.
2. Green LED indicates 'power on' by flashing every 5th second. When placed in the charger, the LED will illuminate when the unit is fully charged. When placed in the charger, the button (3) will illuminate at a low level enabling the user to easily find the unit in the dark. When the unit is 'out of range' the button will light in a running circle'.
- 3.

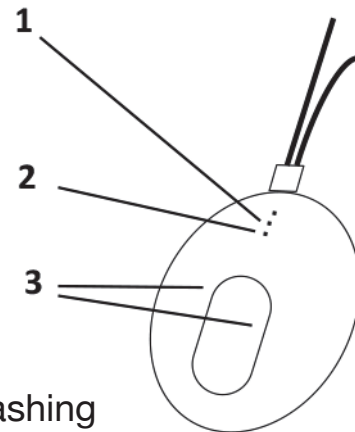

CHARGING

The unit should be charged overnight. The unit can be operated normally while placed in the charger.

In charging mode the button (3) will illuminate at a low level to indicate that the unit is correctly installed in the charger and to enable the user to easily locate the button during night time. A fully charged battery is indicated by the green LED (2).

NOTE!

The green LED will illuminate constantly when the battery is fully charged AND the unit is placed in the charger. When the unit is removed from the charger the green LED (2) will flash slowly (approx. once every 5 seconds) to indicate that the unit is OK.

LOW BATTERY

Once the battery level has decreased to approx. 25%, this will be indicated by the red LED (1) flashing. Once the red LED (1) is flashing, the unit should be charged.


OUT OF RANGE

If the unit is physically moved out of coverage of the DECT system, it is no longer connected, and the unit has no function. In this situation the button (3) will indicate this state as a 'running circle'.

IPEI NUMBER

Slide the necklace lock upwards. This will release the necklace cord and reveal the label with IPEI Information.

This number is needed by the installer for subscribing the unit to the DECT system.

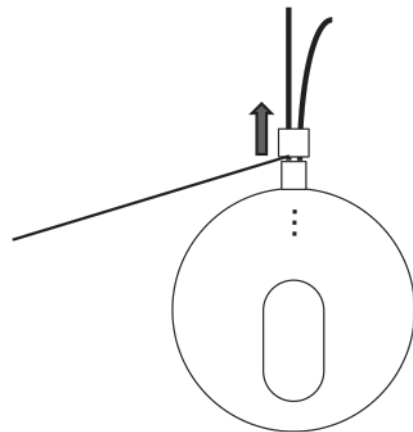

INSTALLATION

The MoVi will be installed by the supplier.

SPECIFICATIONS

- Compatible with Spectralink DECT Systems
- DECT GAP compliant
- Full duplex handsfree operation
- Loud and crystal clear sound
- Water/dust classification : IP56
- Standby time (locator disabled) : 60h
- Weight : 35g
- Physical size : Ø 60 x 22 mm

DECLARATION OF CONFORMITY

ECT hereby declare that this product is in conformity with essential requirements and other relevant requirements of the **R**adio **E**quipment **D**irective 2014/53/EU:

EMC Directive 2014/30/EU: EN 301489-1 V1.9.2

RoHS Directive 2011/65/EU

LVD: IEC/EN60 950 - 1: 2006

DECT Radio Spectrum: EN301406 V2.2.2



CE